EN

PURE ESSENTIAL OIL DIFFUSER/VAPORISER

white black silver

OPERATING INSTRUCTIONS

READ THE INSTRUCTIONS CAREFULLY BEFORE OPERATING THE PRODUCT OR CARRYING OUT MAINTENANCE OPERATIONS. OBSERVE ALL THE SAFETY INSTRUCTIONS; FAILURE TO OBSERVE THE INSTRUCTIONS MAY LEAD TO ACCIDENTS AND/OR DAMAGES.

IMPORTANT INSTRUCTIONS, KEEP FOR FUTURE REFERENCE.

THIS APPLIANCE IS FOR DOMESTIC USE ONLY.

INFORMATION ON PROPER DISPOSAL OF THE APPLIANCE IN COMPLIANCE WITH EUROPEAN DIRECTIVE 2002/96/EC.

When this appliance reaches the end of its useful life, it must not be disposed of together with household waste but must be delivered to appropriate separate waste disposal plants or to dealers that provide similar service. Separate waste disposal of electrical and electronic appliances prevents possible negative effects on the environment and human health resulting from inadequate disposal, and also allows for recovering and recycling the materials comprising the appliances to ensure significant saving in terms of energy and resources. The separate disposal obligation is underlined by the crossed-out dustbin symbol appearing on the product. Illegal disposal of the product by the user shall determine the application of the administrative sanctions defined by the regulations in force.

GENERAL OPERATING AND SAFETY INSTRUCTIONS

- OILO is an extremely safe and simple electrical appliance that heats the essential oils placed within its central cavity, spreading the aroma throughout the ambiance in a safe (it uses no hot water), clean (it leaves no residues) and effective manner.
- Use this products following the operating instructions carefully. Any other use not recommended by the manufacturer may cause fire, electric shock or malfunctions.
- Ensure that the required voltage and frequency (AC230V-/50Hz) match the available power source.
- This product is not a toy. Children should be adequately supervised to ensure that they do not play with the appliance.
- This appliance is not suitable for use by persons (including children) with reduced physical, sensory or mental abilities, or persons without the necessary experience and knowledge, unless they have been adequately supervised and instructed concerning the use of the appliance by a person responsible for their safety.
- **Disconnect the mains power when the appliance is not in use or for cleaning operations. Keeping the plug inserted may cause electric shocks or accidents.**
- To disconnect the appliance remove the plug from the socket. Pull on the plug only. Do not pull on the cord when turning off the appliance.
- Do not bend, drag and twist the cord or apply force to remove it.
- **Do not use the appliance if the cord or plug are damaged:** this may cause the risk of fire or electric shock. If the power supply cord is damaged, it must be replaced by the manufacturer, dealer or a similarly qualified person so as to avoid any safety risks.
- Do not use the appliance on soft surfaces such as beds.
- Always stand the product on a flat, stable surface when in operation, in order to prevent it from overturning.
- Arrange the cord in such a way that other products or objects do not rest on it. Do not run the cord under carpets. Do not cover the cord with blankets, carpets or similar materials. Place the cord far away from busy areas, or in a place where it cannot be accidentally pulled-out. During use, the cord must be entirely unwound.
- In the event of an anomaly, switch the appliance off and remove the plug immediately.
- Do not dismantle, repair or modify this product freely. In the event of malfunctions, contact the technical assistance centre directly.
- Do not immerse the power cord or whole appliance in water or other liquids.
- Do not touch the plug with wet hands.
- Do not use acidic or basic solvents for cleaning the appliance: they may ruin the ceramic or finish.
- Do not operate the appliance in close proximity to bathtubs, showers, washbasins or pools.
- Ensure that the product does not operate in the presence of unsupervised children, animals or disabled persons.
- If the product is not used for prolonged periods, disconnect the plug, replace the product in its packaging and store it in a dry, ventilated place.
- This appliance is built with a dual electrical insulation (class II). It does not therefore require an earth connection.
- Do not operate the appliance outdoors.

WARNING:
THE ON/OFF SWITCH IS NOT THE ONLY METHOD OF DISCONNECTING THE MAINS POWER. ALWAYS PULL OUT THE PLUG FROM THE SOCKET IN THE EVENT OF MAINTENANCE OPERATIONS, WHEN MOVING THE APPLIANCE OR WHEN IT IS NOT USED

DESCRIPTION OF PARTS

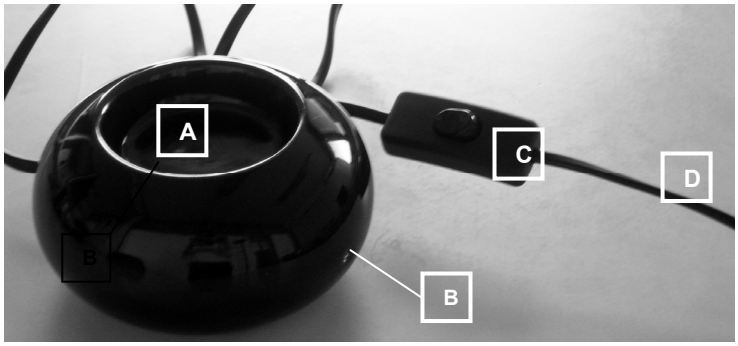

A. Space for placing drops of pure essential oils.

B. Blue operating LED

C. ON/OFF button

D. Power cord

OPERATING INSTRUCTIONS

Place the appliance on a flat, stable surface.
Connect the power cord to a suitable electric socket (230V).
Turn the switch on and leave the appliance to heat for around 15 minutes: the blue operating LED will turn on. Place 8-10 drops of your favourite **pure essential oils** into the central cavity.

WARNING!
Only use PURE ESSENTIAL OILS or MIXES OF PURE ESSENTIAL OILS: essences that are diluted with other substances will not vaporise.
DO NOT ADD WATER: water serves no purpose as the heat produced within the central cavity suffices to vaporise the oils.

The appliance can be left to function continuously in complete safety as it is fitted with a device that keeps the internal temperature constant, leaving the external surface only slightly warm.
Consumption is also very low: just 5 watts.

Even when the oil has run out, the appliance can continue to operate safely, as it is protected against overheating and the aroma will continue to be spread throughout the ambiance even once the oil has run out.

WHICH OILS SHOULD I CHOOSE?

Here is a brief note on the properties of the most well-known oils:

Dynamic, active, extrovert: citronella, eucalyptus, lemon, Melissa, mint.
Intense, harmonising, sensual: lavender.
Calming, stabilising, balsamic: juniper, thyme.
Oils not safe for use when pregnant, breast-feeding or on children: juniper, thyme.
Oils not to be used before exposing oneself to the sun: lemon.

HOW TO CLEAN AND STORE THE PRODUCT

WARNING!
Always unplug the appliance from the mains supply before cleaning the appliance as electric shocks and malfunctions may occur.

Use a soft, damp cloth to clean both the external surface and central cavity of the appliance.
Do not touch or scratch the ceramic surface with sharp objects.
Do not use detergents or solvents, petrol, xylene or other aggressive or abrasive products to clean any part of the appliance.

The appliance must be cleaned regularly in order to guarantee its correct function.
Clean the internal cavity carefully every time the essence is changed.

Clean the internal cavity of the appliance carefully from all oil residues and the external surface using a soft, damp cloth. Allow the appliance to dry completely.
Place the appliance and instructions into the original box and store in a cool, dry place.

argo
improve your life
www.argoclima.com

MADE IN CHINA